



Unscrew valve-hat to ensure clear of any debris

If leaking from spout opening

If leaking from where gaskets meet tank-wall

Cone-shaped Washers below are directional, make sure the pointed ends are directed towards the tank-wall opening