


FFC (Free Flow Control) Mechanism – Assembly and Disassembly Instructions

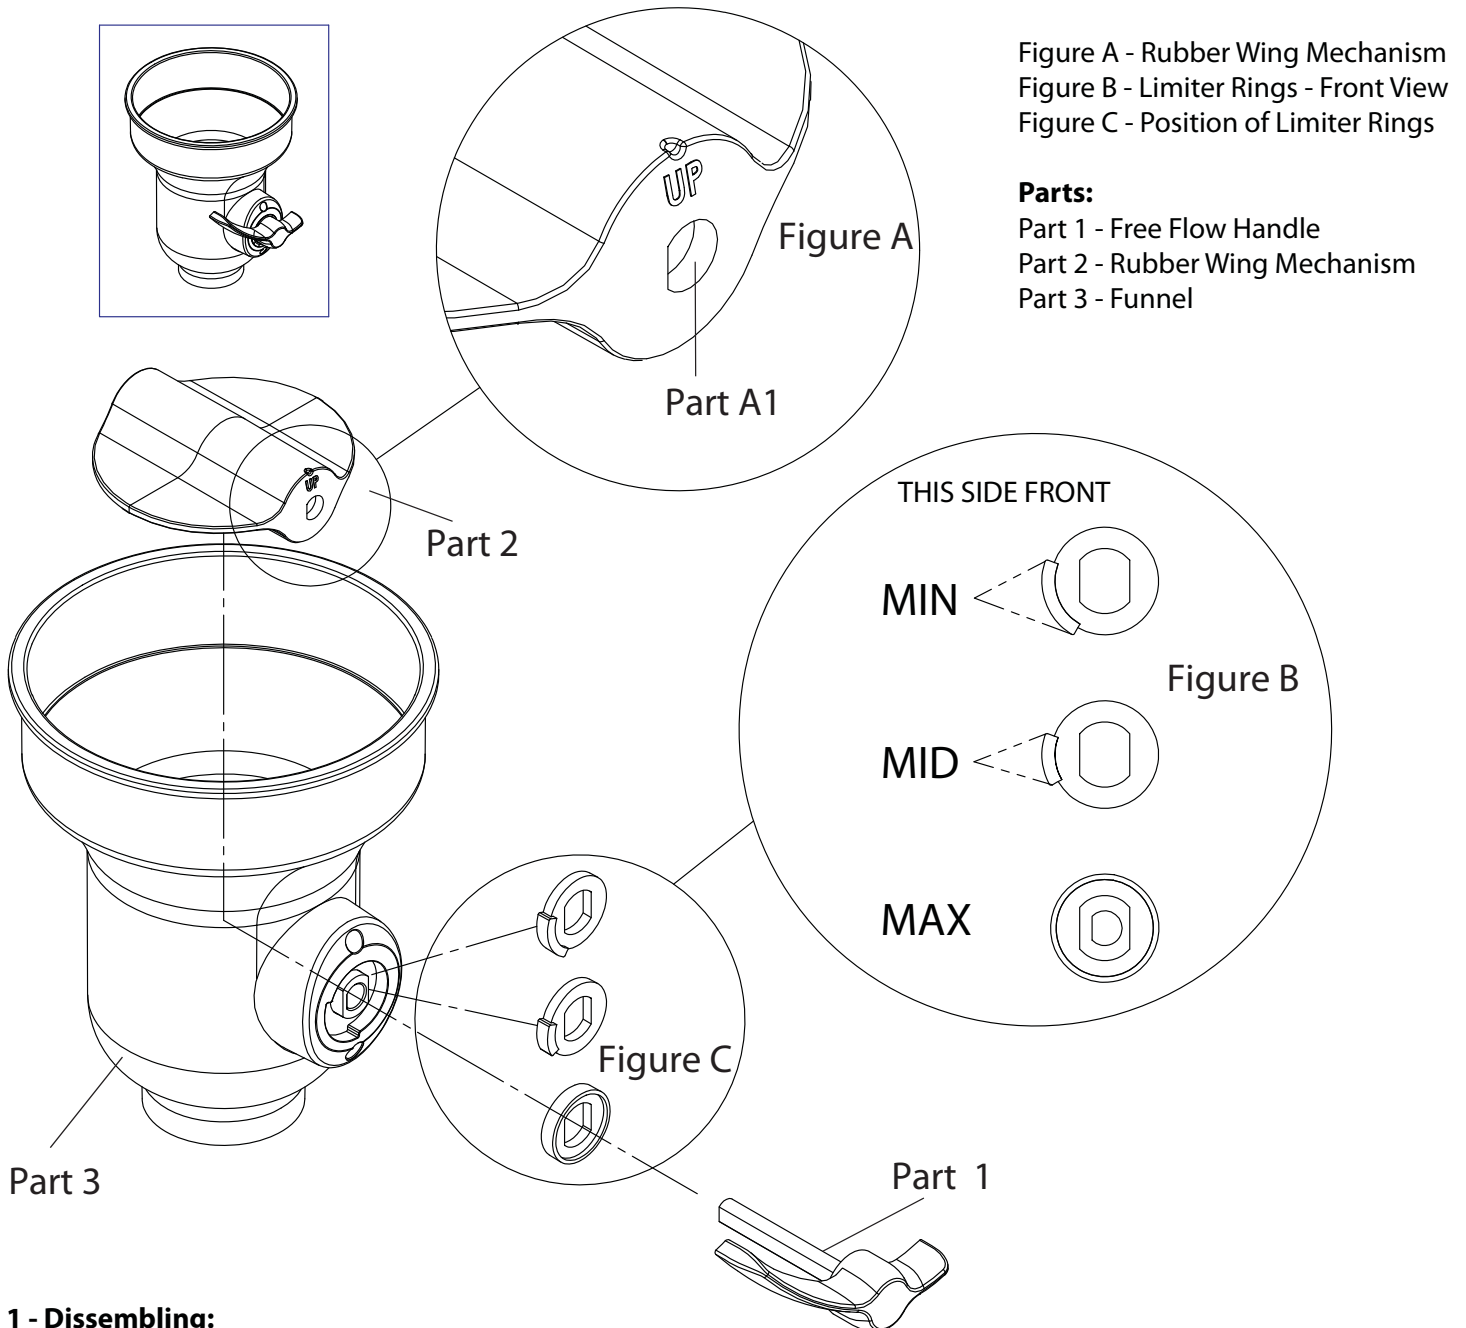

1 - Disassembling:

- 1.1 Pull the handle outwards (Part 1) from the funnel (Part 3).
- 1.2 Release and remove the rubber wing (Part 2) from the funnel (Part 3).

2 - Assembling:

- 2.1 Insert the rubber wing (Part 2) into the funnel (Part 3) ensuring that it is placed in an upwards position as per Figure A. Make sure that the plastic pin at the back of the rubber wing fits into the back hole of the funnel (Part 3).
 - 2.2 Choose the correct Limiter Ring for the desired flow (Figure B) and then insert the Limiter Ring into place (Figure C).
 - 2.3 Then insert the free flow handle (Part 1) into the mechanism pushing it through the hole of the rubber wing (Figure A1) until the very end.
 - 2.4 Make sure that the mechanism is working correctly by turning the handle anti-clockwise to see if it automatically springs back in to place.
- The unit is now ready for use.